

Quick Start

Nighthawk X6S

AC3000 Tri-Band WiFi Range Extender

Model EX8000



NETGEAR

Getting Started

To extend the range of your WiFi network, you must connect the extender to your existing WiFi network.

You can do this in one of two ways:

- **Connect with WPS.** Wi-Fi Protected Setup (WPS) lets you join a secure WiFi network without typing the network name and password. For more information, see [Connect With WPS](#).

Note: WPS does not support WEP network security or a hidden SSID network. If your router WiFi network uses WEP security or its SSID is hidden, follow the instructions in [Connect With the NETGEAR Installation Assistant](#).

- **Connect with the NETGEAR installation assistant.** To use the NETGEAR installation assistant, you must launch a web browser on your computer or mobile device. For more information, see the other side of this quick start guide.

Note: If your router's WiFi security setting is set to WPA2 enterprise, your extender can't connect to your router. You must change your router's WiFi security setting.

Connect With WPS

1. Place the extender and supply power.



- Place the extender close to your router.
- Plug the extender into an electrical outlet. The Power LED lights green. If the Power LED does not light, press the **Power** button.


2. Connect your extender to your router with WPS.



- Press the **WPS** button on the extender. The WPS LED  blinks white.
- Within two minutes, press the **WPS** button on your router. When the extender connects to the router, the WPS LED lights solid white. If the Link Status LED  lights white, the connection between your router and extender is good. If the Link Status LED lights amber or red, move the extender closer to the router and try again.
- If your WiFi router supports the 5 GHz band, repeat Steps 2a and 2b and check to see that the Link Rate LED  and Maximum Throughput LED  light solid white to confirm the connection.

Note: If your router supports the 5 GHz band, your extender attempts to connect to the router's 5 GHz band the first time you press the **WPS** button. If your extender did not connect to the router's 5 GHz band the first time, repeat the WPS process.

3. Choose a location and check the signal strength.

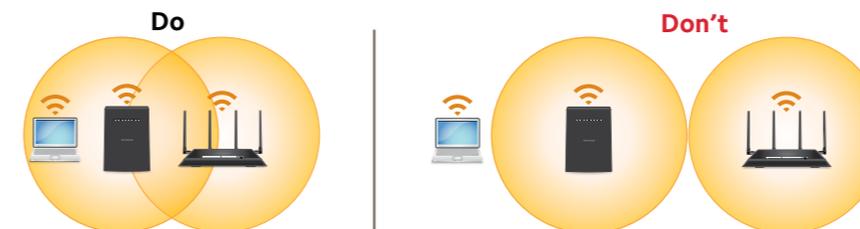

- Move your extender to a new location that is about halfway between your router and the area with a poor router WiFi signal. The location that you choose must be within the range of your existing WiFi router network. See the previous image for an example. The Link Status LED  helps you choose a spot where the extender-to-router connection is optimal. For more information, see [LED Descriptions](#) on the back of this quick start guide.

- If you get no connection or a poor connection, move the extender closer to your router and try again until the Link Status LED lights white.

4. Connect your devices.



- Take your WiFi-enabled computer or mobile device to the location with poor WiFi router coverage.
- Connect your WiFi-enabled computer or mobile device to the extended network. Your extender uses the same WiFi network settings as your router for its 2.4 GHz and 5 GHz extended networks.

For example, if your extender connects to the router's 2.4 GHz WiFi band, your extender uses your router's 2.4 GHz WiFi settings for both its networks:

- **Router 2.4 GHz WiFi network name.** MyWiFiExample
- **Router 5 GHz WiFi network name.** MyWiFiExample-5G
- **Extended 2.4 GHz WiFi network name.** MyWiFiExample
- **Extended 5 GHz WiFi network name.** MyWiFiExample

If your extender connects to the router's 5 GHz WiFi band, your extender uses your router's 5 GHz WiFi settings for both its networks:

- **Router 2.4 GHz WiFi network name.** MyWiFiExample
- **Router 5 GHz WiFi network name.** MyWiFiExample-5G
- **Extended 2.4 GHz WiFi network name.** MyWiFiExample-5G
- **Extended 5 GHz WiFi network name.** MyWiFiExample-5G

Note: Since your router and extended networks share the same WiFi network name, only one WiFi network name is broadcast.




201-21252-02

July 2017

NETGEAR, Inc.
350 East Plumeria Drive
San Jose, CA 95134, USA

Connect With the NETGEAR Installation Assistant

1. Place the extender and supply power.

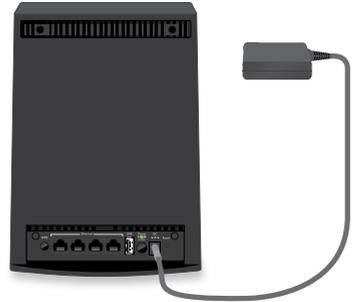

- Place the extender close to your router.
- Plug the extender into an electrical outlet. The Power LED lights green.
If the Power LED does not light, press the **Power** button.

2. Connect your device to the extender.




- Connect a computer or mobile device to the extender using a WiFi or Ethernet connection:
 - WiFi.** On your WiFi-enabled computer or mobile device, open the WiFi connection manager and locate and connect to the extender network called NETGEAR_EXT.
When your WiFi-enabled computer or mobile device is connected to the extender, the Client LED  lights solid white.
 - Ethernet.** Use an Ethernet cable to connect the Ethernet port on the extender to an Ethernet port on your computer.

3. Connect your extender to your router with a web browser.

- Launch a web browser and visit www.mywifext.net. The NETGEAR installation assistant displays.
- Follow the prompts to connect your extender to your existing WiFi network.

4. Choose a location and check the signal strength.

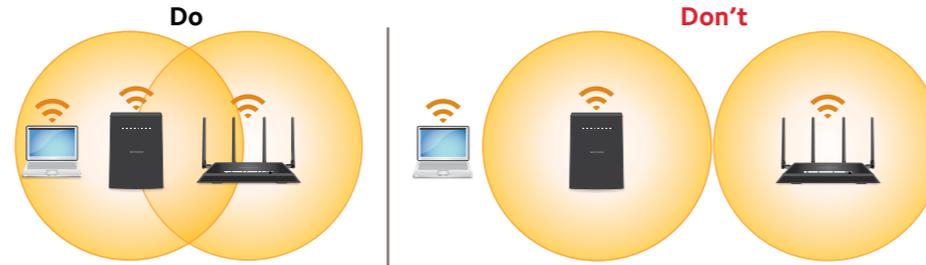

- Move your extender to a new location that is about halfway between your router and the area with a poor router WiFi signal. The location that you choose must be within the range of your existing WiFi router network. See the previous image for an example.
The Link Status LED  helps you choose a spot where the extender-to-router connection is optimal. For more information, see [LED Descriptions](#).
- If you get no connection or a poor connection, move the extender closer to your router and try again until the Link Status LED lights white.

LED Descriptions

For more information about the LEDs, see the user manual.

 Link Status LED	<p>This LED indicates the WiFi connection between the extender and the router.</p> <ul style="list-style-type: none">Solid white. Best connection.Solid amber. Good connection.Solid red. Poor connection.Off. No connection.Blinking white. The extender resets to its factory default settings.
 Maximum Throughput LED	<ul style="list-style-type: none">Solid white. The extender uses the 5 GHz WiFi band for backhaul.Off. The extender uses the 2.4 GHz WiFi band for backhaul.Blinking white. The extender is resetting to its factory default settings.
2.4GHz 5GHz 2.4 GHz and 5 GHz LEDs	<ul style="list-style-type: none">Solid white. The 2.4 or 5 GHz radio is operating.Off. The 2.4 or 5 GHz radio is off.Blinking white (5 GHz LED only). The extender is resetting to its factory default settings.
 Client Link LED	<ul style="list-style-type: none">Solid white. The extender is connected to a WiFi-enabled computer or mobile device.Off. The extender is not connected to a WiFi-enabled computer or mobile device.
 USB LED	<ul style="list-style-type: none">Solid white. A USB device is connected to the extender.
 WPS LED	<ul style="list-style-type: none">Blinking white. The extender is attempting to connect with a router or WPS-enabled device.Solid white. The extender connected to a router or a WPS-enabled device.Off. WPS on the extender is disabled.
 Ethernet LED	<ul style="list-style-type: none">Solid white. An Ethernet device is connected to an Ethernet port.

Log In to Access Extender Settings

After installation, you can log in to the extender to view or change the extender's settings.

➤ To log in to the extender:

- Launch a web browser from a computer or mobile device that is connected to your extender network.
- Log in to your extender:
 - If you did not enable the One WiFi Name feature, enter **www.mywifext.net** in the address field of the browser.
 - If you enabled the One WiFi Name feature, enter one of the following URLs:
 - Windows-based computer.** <http://mywifext>
 - Mac computers and iOS devices.** <http://mywifext.local>
 - Android devices.** <http://<extender's IP address>> (for example, <http://192.168.1.3>)To find your extender's IP address, do the following:
 - Log in to your router.
 - Find the page in your router web interface that lists the devices connected to your router.
 - Find your extender in the list and note your extender's IP address.
 - Enter your extender's IP address in the address field of your web browser. A login page displays.
- Enter your admin email address and password and click the **LOG IN** button. The Status page displays.

Support

Thank you for purchasing this NETGEAR product. You can visit www.netgear.com/support to register your product, get help, access the latest downloads and user manuals, and join our community. We recommend that you use only official NETGEAR support resources.

Si ce produit est vendu au Canada, vous pouvez accéder à ce document en français canadien à <http://downloadcenter.netgear.com/other/>.

(If this product is sold in Canada, you can access this document in Canadian French at <http://downloadcenter.netgear.com/other/>.)

For the current EU Declaration of Conformity, visit <http://kb.netgear.com/11621>.

For regulatory compliance information, visit <http://www.netgear.com/about/regulatory/>. See the regulatory compliance document before connecting the power supply.